

MATTEL ELECTRONICS **Intellivision** Intelligent Television

VIDEO GAMES
BASEBALL
BASEBALL
POOL
OTHER

MATTEL ELECTRONICS
Intellivision
Intelligent Television

GAMES • ENTERTAINMENT
SELF-EDUCATION • PERSONAL IMPROVEMENT
INDIVIDUAL AND FAMILY INFORMATION
PROCESSING



ARMOR BATTLE

BASEBALL

BASKETBALL

HOCKEY

MATH FUN

53697 Cart 4

MATTEL ELECTRONICS®

INTRODUCES

IntelliVision™

Intelligent Television

GAMES • ENTERTAINMENT

SELF-EDUCATION • PERSONAL IMPROVEMENT

**INDIVIDUAL AND FAMILY INFORMATION
PROCESSING**



Intellivision is a system that consists of:

1. *The Master Component*
2. *The Keyboard Component **

(*Each Sold Separately)

The heart of Intellivision is the Master Component. Separately, it provides a variety of entertainment and game play.

When available the Keyboard Component will expand the system to provide programs in self education, personal improvement and family information processing.

Intellivision—The future today! Try Intellivision yourself by using the display instructions.

MASTER COMPONENT

1.

Insert Hand Controller Overlays

Slide plastic overlay down and over keypad on each Hand-held Controller.



3.

Turn on the Master Component

1. Turn television and Master Component ON.
2. Adjust volume, picture, and color controls on television set to a pleasing level.
3. Press RESET BUTTON to start game.

2.

Insert the Cartridge

Gently push cartridge straight into slot on right side of Master Component, as shown.

FOR ADDITIONAL INFORMATION ON THE MASTER COMPONENT, ASK YOUR SALES CLERK FOR DETAILS.

ARMOR BATTLE

BASEBALL

BASKETBALL

HOCKEY

MATH FUN



Major League BASEBALL

ASK SALES CLERK FOR BASEBALL CARTRIDGE
AND HAND CONTROLLER OVERLAYS.

1. PRESS "RESET" BUTTON.
2. PRESS "DIRECTION DISC"
TO START GAME.

PITCHER

**DIRECTION
DISC**

Fast Ball

Inside Curve

Outside Curve

**Action for
two players!**



BAT BUTTON

HOW TO PITCH (Right Controller)

1. Press outer edge of "DIRECTION DISC."
2. Press "PITCHER" on Hand Controller to return ball.

HOW TO BAT (Left Controller)

1. When ball crosses home plate, press "BAT BUTTON."
2. When you hit the ball, press right side of "DIRECTION DISC" to advance batter.

MAJOR LEAGUE BASEBALL ALSO HAS DOUBLE PLAYS AND BASE STEALING.
FOR ADDITIONAL PLAY INFORMATION, ASK YOUR SALES CLERK FOR DETAILED INSTRUCTIONS.

ARMOR BATTLE

BACKGAMMON

BASKETBALL

HOCKEY

MATH FUN



NBA BASKETBALL

TM *

ASK SALES CLERK FOR BASKETBALL CARTRIDGE AND HAND CONTROLLER OVERLAYS.

1. PRESS "RESET" BUTTON.
2. PRESS "DIRECTION DISC" TO START GAME.

JUMP SHOT KEY

BLOCK KEY

DIRECTION DISC

**Action for
two players!**



HOW TO PLAY

1. You control the team "Captain" on each side.
2. Press "DIRECTION DISC" for the tip-off.

OFFENSE

1. Press outer edges of "DIRECTION DISC" to dribble downcourt.
2. Press "JUMP SHOT" key.

DEFENSE

1. Use "DIRECTION DISC" to move defensive "Captain" into blocking position.
2. Press "BLOCK" key.

NBA BASKETBALL ALSO HAS A 24 SECOND CLOCK, SET SHOTS, AND PASSING.
FOR ADDITIONAL PLAY INFORMATION, ASK YOUR SALES CLERK FOR DETAILED INSTRUCTIONS.

ARMOR BATTLE

BACKGAMMON

CHECKERS

HOCKEY

MATH FUN



 
NHL HOCKEY

ASK SALES CLERK FOR HOCKEY CARTRIDGE
AND HAND CONTROLLER OVERLAYS.

- 1. PRESS "RESET" BUTTON.**
- 2. PRESS "MOVE PLAYER DISC"
TO START GAME.**

**MOVE PLAYER
DISC**

**Action for
two players!**

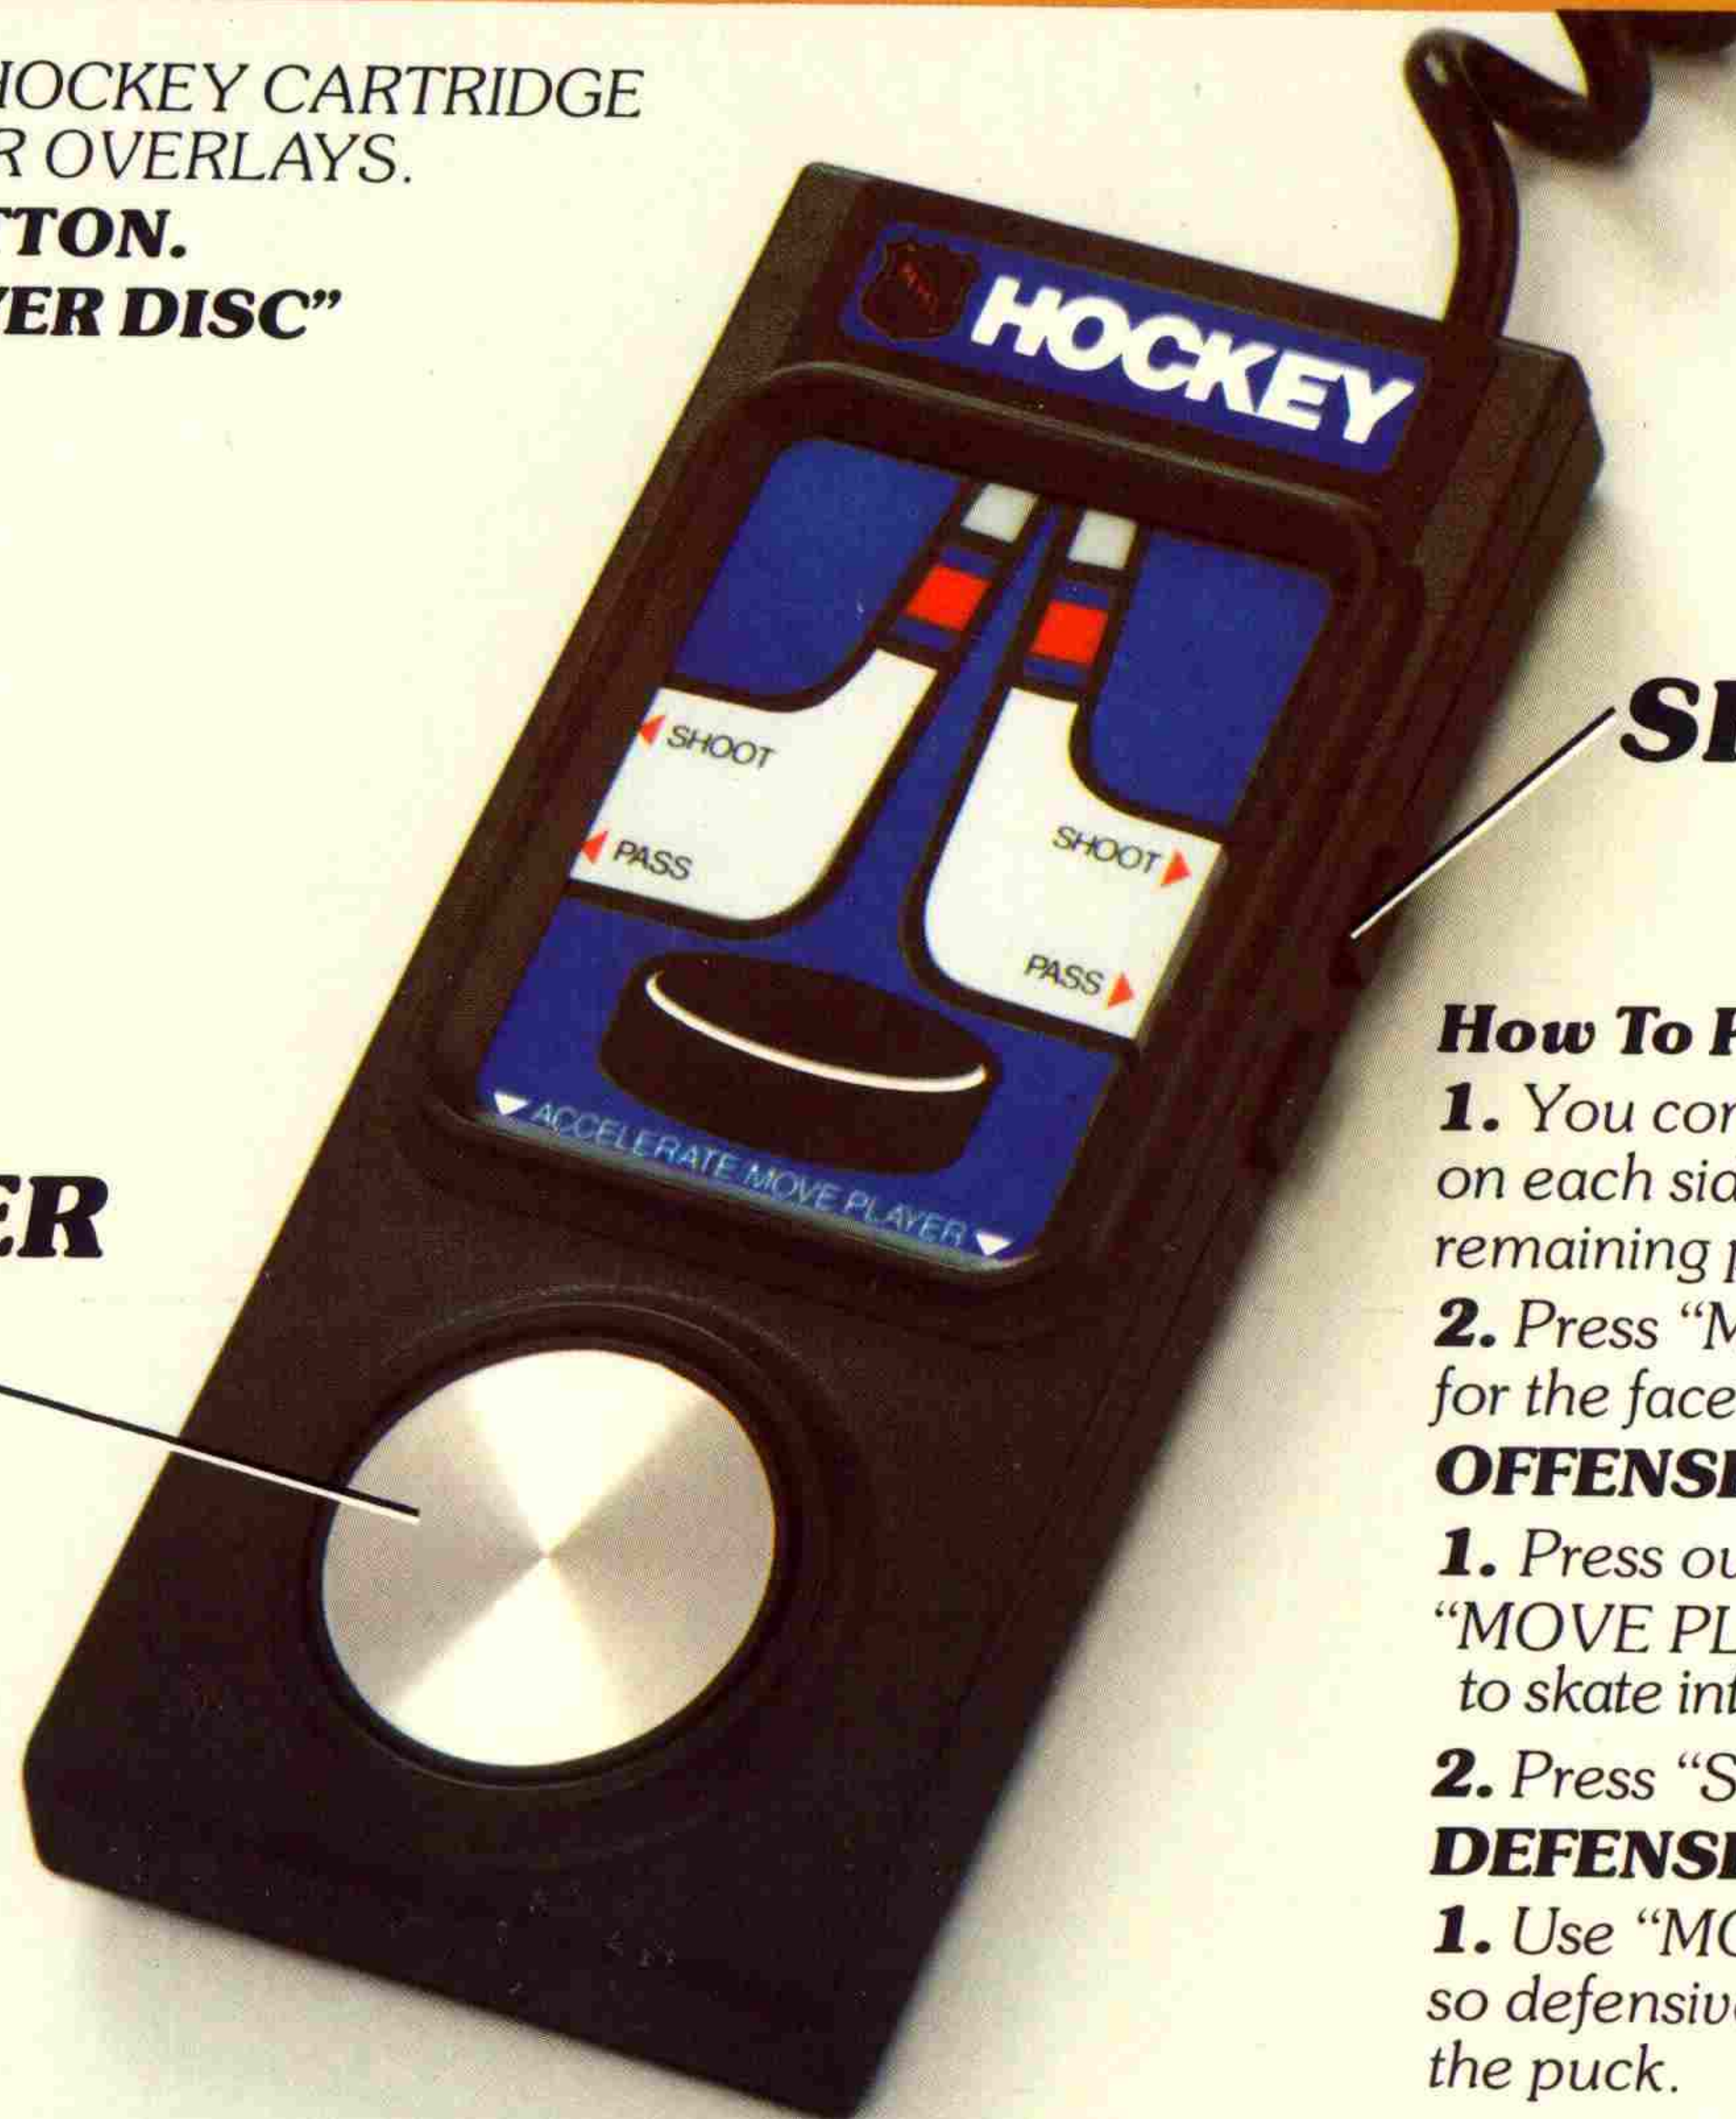

SHOOT KEY

How To Play

1. You control the team "Captain" on each side. Computer controls remaining players.

2. Press "MOVE PLAYER DISC" for the face off.

OFFENSE

1. Press outer edges of "MOVE PLAYER DISC" to skate into position.

2. Press "SHOOT KEY."

DEFENSE

1. Use "MOVE PLAYER DISC" so defensive "Captain" may steal the puck.

NHL HOCKEY ALSO HAS PASSING AND PENALTIES.
FOR ADDITIONAL PLAY INFORMATION, ASK YOUR SALES CLERK FOR DETAILED INSTRUCTIONS.

ARMOR BATTLE

BACKGAMMON

CHECKERS

POKER &
BLACK JACK

MATH FUN



ELECTRIC COMPANY MATH FUN™

ASK SALES CLERK FOR MATH FUN CARTRIDGE
AND HAND CONTROLLER OVERLAY.

1. PRESS "RESET" BUTTON.
2. PRESS "ENTER" KEY
ON HAND CONTROLLER.

NUMBER KEYS

(1 through 9 plus 0)

ENTER

(press if answer is wrong)



GAME SET UP

1. Press key No. 5, then press "ENTER" key. (Left controller)
2. Press key No. 3, then press key No. 2
3. Press "ENTER" Key (Left Controller)
4. Press '0' key then press "ENTER" key. (Right controller)

PLAY ACTION

1. Press "NUMBER" key(s) to answer problem. (Left controller)
2. Numbers will appear one at a time starting at the right and moving to the left.

 
ELECTRIC COMPANY MATH FUN ALSO HAS MANY LEVELS OF DIFFICULTY
FOR ADDITIONAL PLAY INFORMATION, ASK YOUR SALES CLERK FOR DETAILED INSTRUCTIONS

ARMOR BATTLE

BACKGAMMON

CHECKERS

POKER &
BLACKJACK

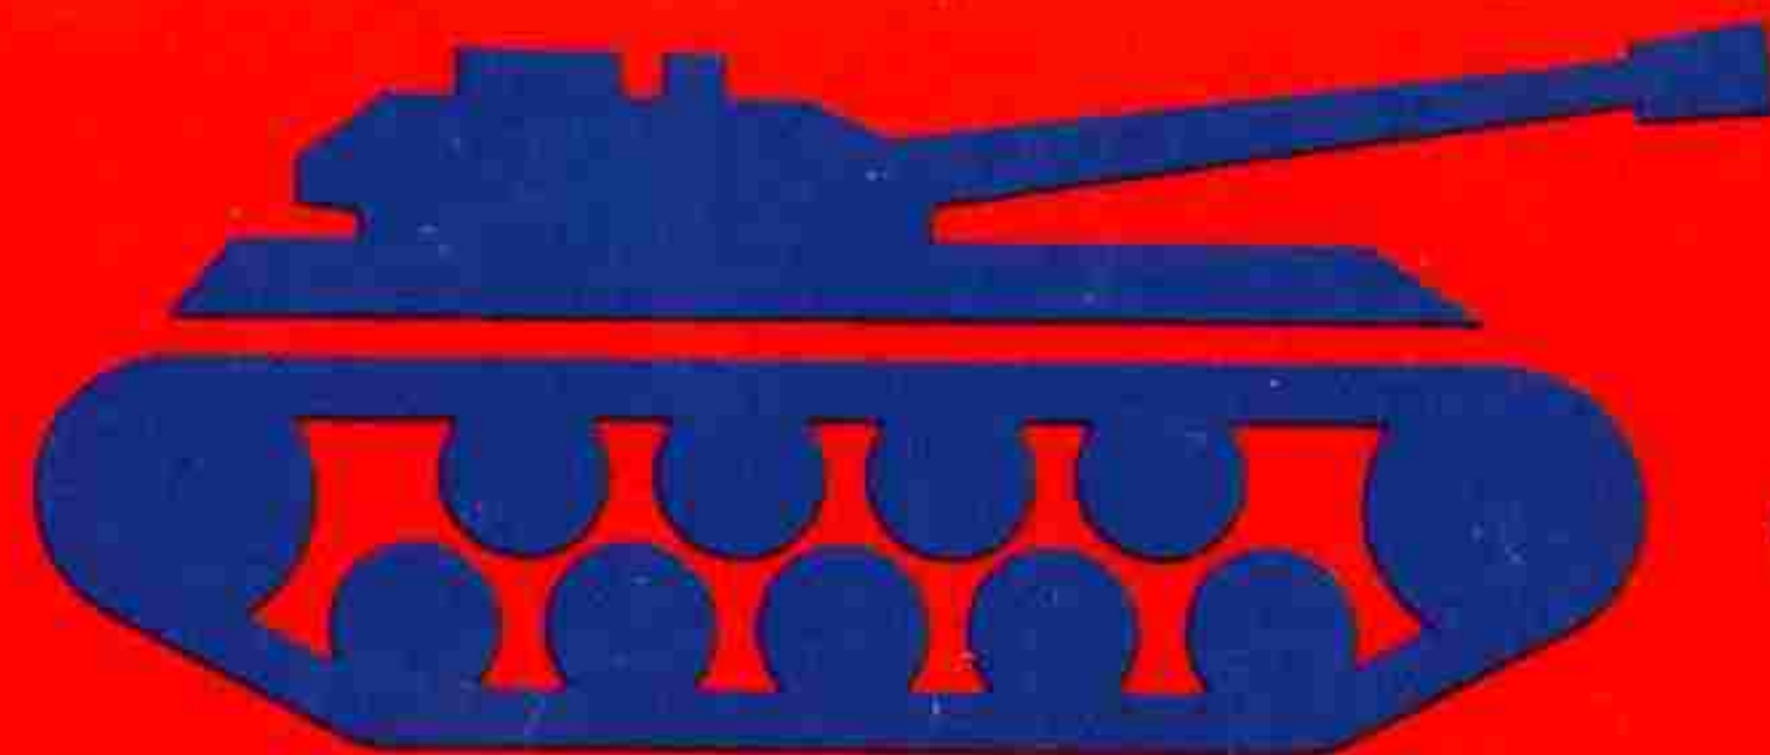

ARMOR BATTLE™

ASK SALES CLERK FOR ARMOR BATTLE CARTRIDGE
AND HAND CONTROLLER OVERLAYS.

1. PRESS "RESET" BUTTON.
2. PRESS "DIRECTION DISC"
TO START GAME.

STAR

**DIRECTION
DISC**

(turns tank and aims cannon)

**SHOOT
FORWARD**



**Action for
two players!**

HOW TO PLAY

1. Press "STAR" key to start.
2. Press "FORWARD" button to move your control tank forward. Release to stop.
3. Press outer edges of "DIRECTION DISC" to steer & aim gun at enemy tank.
4. Press "SHOOT" button to fire at enemy. 3 hits on an enemy tank knocks it out.

WITH ARMOR BATTLE YOU CAN ALSO SWITCH TANKS AND LAY INVISIBLE MINES.
FOR ADDITIONAL PLAY INFORMATION, ASK YOUR SALES CLERK FOR DETAILED INSTRUCTIONS.

BACKGAMMON

CHECKERS

POKER &
BLACK-JACK



*
TM

ABPA BACKGAMMON

ASK SALES CLERK FOR BACKGAMMON CARTRIDGE
AND HAND CONTROLLER OVERLAY.

1. PRESS "RESET" BUTTON.
2. PRESS "MOVE CURSOR DISC"
TO START GAME.

DICE KEYS

**LEVEL 1 KEY
ENTER**

**MOVE CURSOR
DISC**



PIP COUNTER
— press to get running score

HOW TO PLAY

1. Press level 1 key and dice will roll to determine who moves first.
2. Press "MOVE CURSOR DISC" to locate "CURSOR" at piece you want to move.
3. Press appropriate "DICE" keys to make your move.
4. On "double rolls" move four pieces instead of two.
5. Press "ENTER" key.

ABPA BACKGAMMON CAN ALSO BE PLAYED ON DIFFERENT LEVELS OF DIFFICULTY.
FOR ADDITIONAL PLAY INFORMATION, ASK YOUR SALES CLERK FOR DETAILED INSTRUCTIONS.

**POKER &
BLACKJACK**

Las Vegas POKER and BLACKJACK

ASK SALES CLERK FOR POKER AND BLACKJACK
CARTRIDGE AND HAND CONTROLLER OVERLAY.

- 1. PRESS "RESET" BUTTON.**
- 2. PRESS "CONTROL DISC"
TO START GAME.**

DIGIT KEYS

HIT KEY

CONTROL DISC

— use to view
face-down cards

STAND KEY

ENTER KEY

GAME SET UP

- 1.** Enter 5 . . . 0 . . . 0 with DIGIT keys. (Left controller)
- 2.** Press ENTER key on both hand controllers.
- 3.** Press key #4 for Blackjack. (Left controller)
- 4.** Place bet of 1 . . . 0 . . . 0 with DIGIT keys. (Left Controller)
- 5.** Press ENTER key. (Left Controller)

PLAY ACTION

- 1.** Cards are dealt automatically.
- 2.** Press HIT or STAND key.

LAS VEGAS POKER AND BLACKJACK ALSO HAS THREE DIFFERENT POKER GAMES.
FOR ADDITIONAL PLAY INFORMATION, ASK YOUR SALES CLERK FOR DETAILED INSTRUCTIONS